


Attach speed clips prior to assembly of devices to 105 face plate

Wiring harness to be routed through panel cover as shown at lower right

Torque to 5-10 in.-lbs.

111 Insert clamp into grooves as shown before attaching panel to panel cover

Wire harness conduit to generator

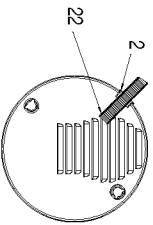

Section A-A

Loosen nut on idle control solenoid and rotate solenoid so black wires in the 3:00 position. Route wires between engine facia and carburetor for hookup with wire harness. Retorque nut to 80-100 in.-lbs. After engine idle speed is set.

plug into double female bullet connector (black wires) from engine block

yellow wire

Brown and Grey wires

Torque 40-50 in.-lbs. 46

To battery side of starter solenoid

Plug light blue wire into solenoid

Red wire from engine

Place this leg of 33 into slot in 8 wires must not interfere with engine linkages (see panel assembly drawing for detail)


22

Solenoid must be in vertical position as shown. If adjustment is needed, retorquing strap nut to 30-40 in.-lbs.

To batter side of starter solenoid

Remove nut install 47 retorquing to 40-50 in.-lbs.

47 Orient cable as shown, keeping cable close to engine place boots over posts after connection are made

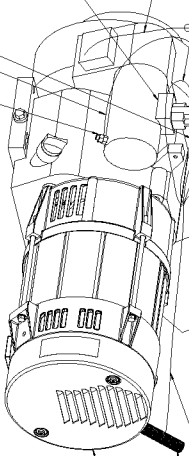

### Parts List for BSV750-W Type 3

Item Number	Part Number	Description	Qty Required
1	Z-GS-0795	TANK FUEL 7G SS	1
2	GS-0199	BUSHING SNAP 1 OD	1
3	000000-00	No Longer Available	1
4	Z-A14582	HOSE FUEL	1
5	000000-00	No Longer Available	1
7	000000-00	No Longer Available	1
7	GS-0872	RESISTOR 10K OHM	2
7	GS-0871	DIODE 10AMP 1000V	2
9	95829230	SCREW .313-18X1.50 H	10
10	GS-0118	STRAP GROUND	1
11	GS-0033	ISOLATOR VIBRATION 1	1
12	SSF-8150	NUT .312-18 UNC HEX	10
13	N017772	LOCK WASHER	1
14	SS-12-CD	SCREW .313-18X.750 H	10
16	000000-00	No Longer Available	1
17	GS-0117	LUG GROUND	1
20	D24273	SHIELD HEAT BSV GHC	1
21	SSF-553-1	SCREW #10-24X.563 TH	1
22	GS-0077	COVER END BLANK	2
23	SSN-632	WASHER .875 OD .375	1
24	91895680	SCREW .250-20X.750 H	10
25	GS-0863	CAP FUEL W/GAUGE	1
26	000000-00	No Longer Available	10
29	000000-00	No Longer Available	1
31	GS-0227	CLAMP FUEL .50	1
33	000000-00	No Longer Available	1
34	N103455	GROMMET	1

### Parts List for BSV750-W Type 3

Item Number	Part Number	Description	Qty Required
35	GS-0437	DRAIN COCK	1
39	SSN-60-ZN	WASHER STEEL TYPE A-	1
40	SSF-549	SCREW .313-18X.50 HE	10
44	000000-00	No Longer Available	1
46	SSF-575	NUT .250-20 HEX W/KE	1
47	000000-00	No Longer Available	1
48	SSN-1014-ZN	WASHER .339/.344 ID	1
101	D29533	PANEL CONTROL BSV750	1
102	000000-00	No Longer Available	1
103	SSF-3156	SCREW #10-9X.500 THD	1
104	SSF-583	SCREW #6-32X.500 PAN	1
105	SSF-584	NUT #6-32 SPEED SELF	1
106	Z-D21508	BREAKER CIRCUIT125/2	1
106	GS-0681	BREAKER CIRCUIT	1
106	000000-00	No Longer Available	1
106	GS-0644	RECEPTACLE GFCI 120V	1
106	GS-0021	RECEPTACLE 125V 30A	1
106	GS-0455	RECEPTACLE 4 PRONG 3	1
106	GS-0026	BREAKER CIRCUIT 125/	1
107	N080007	BOARD ASSY	1
108	SSF-595	NUT .438-28 UNEF HEX	1
109	Z-GS-0728	ASSY BINDING POST SS	1
110	GS-0835	ASSY RESISTOR DC SHU	1
111	D26113	CLAMP MOLDED STRESS	1
112	D27260	SWITCH IDLE CONTROL	1
113	D27259	SWITCH OFF RUN START	1