
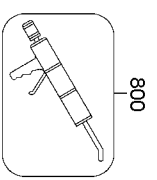



30\*\*  
ORIFICE CAP AND INSTRUCTIONS  
ARE SUPPLIED WITH VALVE

# N70CBPAL


**PNEUMATIC PALLET NAILER MACHINE MOUNTED  
CLAVADORA DE PALETS NEUMÁTICA MONTADA EN LA MÁQUINA  
CLOUSEUSE DE PALETTE PNEUMATIQUE MONTÉE SUR MACHINE**

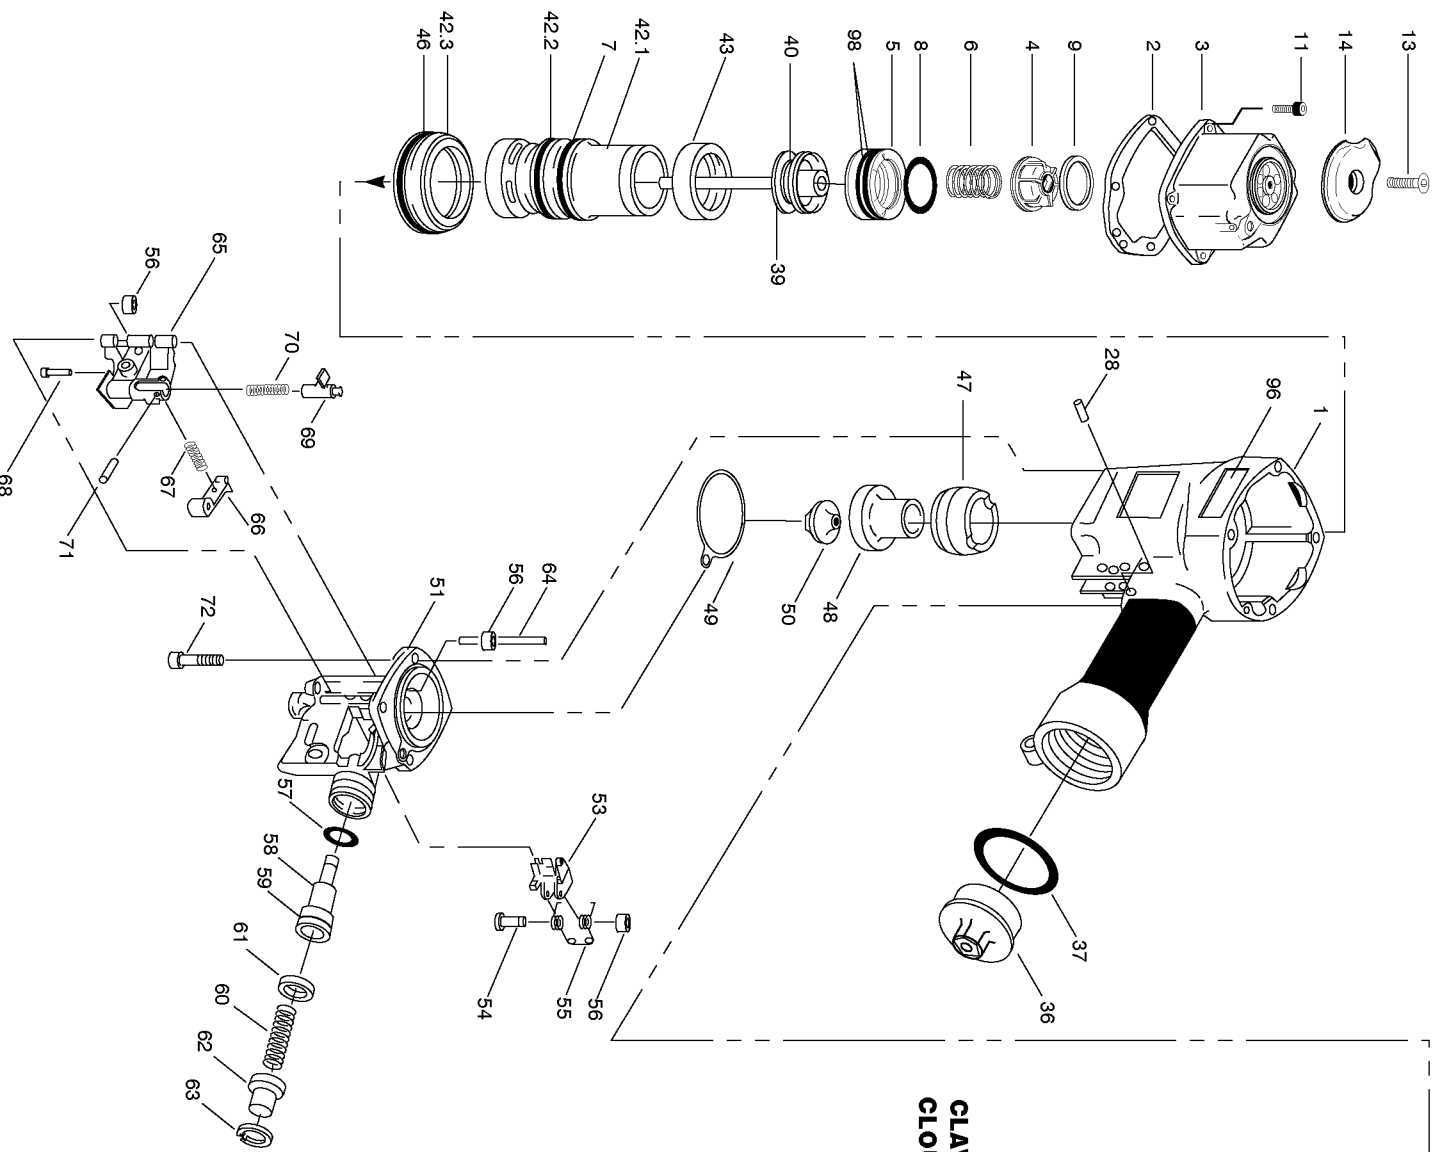

800



811

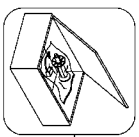

876

\*\* Note that item 30 does not include the the actuator which responds to the remote signal. Customer to select the actuator required from the OPERATION and MAINTENANCE MANUAL. An actuator is not included with the tool.

+ Loctite #271, available as part #851325 Loctite 271 Packet.

## Parts List for N70CBPAL Type 0

Item Number	Part Number	Description	Qty Required
1	110005	FRAME	1
2	N70118	SEAL-CYLINDER CAP	1
3	103942	ASSEMBLY-CYLINDER CA	1
4	N80161	PISTON STOP	1
5	104059	HEAD VALVE	1
6	101256	SPRING-COMPRESSION	1
7	101236	O-RING-2.48X.115	1
8	MRG041630	O-RING-1.638X.118	1
9	T55031	RING-BUMPER	1
11	MSC6100-25	SCREW-SHCS-M6X1.00X2	4
13	MSF8125-25	SCREW-SFHCS M8 X 1.2	1
14	102506	COVER-EXHAUST	1
28	MPP030020	PIN-SPIRAL M3X20MM	1
30	TVA6	KIT-TRIGGER VALVE	1
30	105591	CAP (SERVICE PART)	1
36	103650	CAP-END	1
37	MRG049431	O-RING-2.343X.118	1
39	102630	ASSEMBLY-DRIVER/PIST	1
40	851439	O-RING-1.689X.190	1
42	N70171	SLEEVE-CYLINDER	1
42	N70171	SLEEVE-CYLINDER	1
42	N80169	SEAL-CHECK	1
42	N80168	RING-CYLINDER	1
43	N70155	SEAL-CYLINDER	1
46	MRG084431	O-RING-3.323X.122	1
47	N70156	BUMPER - A	1
48	N70157	BUMPER - B	1

## Parts List for N70CBPAL Type 0

Item Number	Part Number	Description	Qty Required
49	107834	SEAL-NOSE	1
50	105033	GUIDE-DRIVER	1
51	167086	NOSE	1
52	MPP030016	PIN-SPIRAL-M3X16	1
53	167087	PAWL-FEED	1
54	N50087	PIN-SPECIAL(STEP)	1
55	854023	SPRING-TORSION	1
56	854004	WASHER-RUBBER-7	3
57	MRG009824	O-RING-.386X.094	1
58	N70166	FEED PISTON	1
59	851437	O-RING-.819X.095	1
60	854039	SPRING-COMPRESSION	1
61	N70162	STOP-FEED PISTON	1
62	N70163	SPRING COLLAR	1
63	MRB026	RETAINING RING- METR	1
64	N70164	PIN-SPECIAL	1
65	N70122	DOOR	1
66	N70149	PAWL CHECK	1
67	854011	COMPRESSION SPRING	1
68	N70140	PIN-SPECIAL(STEP)	1
69	N70150	LATCH DOOR	1
70	101408	SPRING-COMPRESSION	1
71	MPG030012	PIN SPRING	1
72	MSC8125-28	SCREW-SHCS M8X28	4
96	113220	LABEL-BOSTITCH	1
97	159927	LABEL-WARNING-T.O.	1
98	851438	O-RING-2.236X.115	1

## Parts List for N70CBPAL Type 0

Item Number	Part Number	Description	Qty Required
800	100653	LUBE (2CC)	1
800	100679	LUBE (1LB.CAN)	1
811	851325	LOCTITE	1
876	RBK8	N70/N80/N90 REBUILD	1