

INSTALLING BRUSH SPRINGS ON A BRUSH CARD ASSEMBLY WITH FOUR (4) BRUSHES

There are two 40-50-2170 RH Brush Springs and two 40-50-2175 LH Brush Springs. Follow the instructions below for proper installation.

Brush Shunt (4 places)

Right Brush Spring (2x)

Left Brush Spring (2x)

Carbon Brush (4x)

Be sure carbon brush is in brush tube with brush shunt moving freely in side groove of tube.

Place brush spring over post with short leg positioned downward as shown. Be sure spring is completely down with short leg trapped against 'Y' shaped wall on brush card.

While holding spring in place, bring the long leg of spring over the brush tube and through rear opening of tube. Position rounded hook of spring in groove on back of carbon brush. Be sure to check for free movement between carbon brush, brush shunt and brush spring.

Black

Brush Card Assy.


Red



Correct

Short leg of spring to the bottom

Wrong

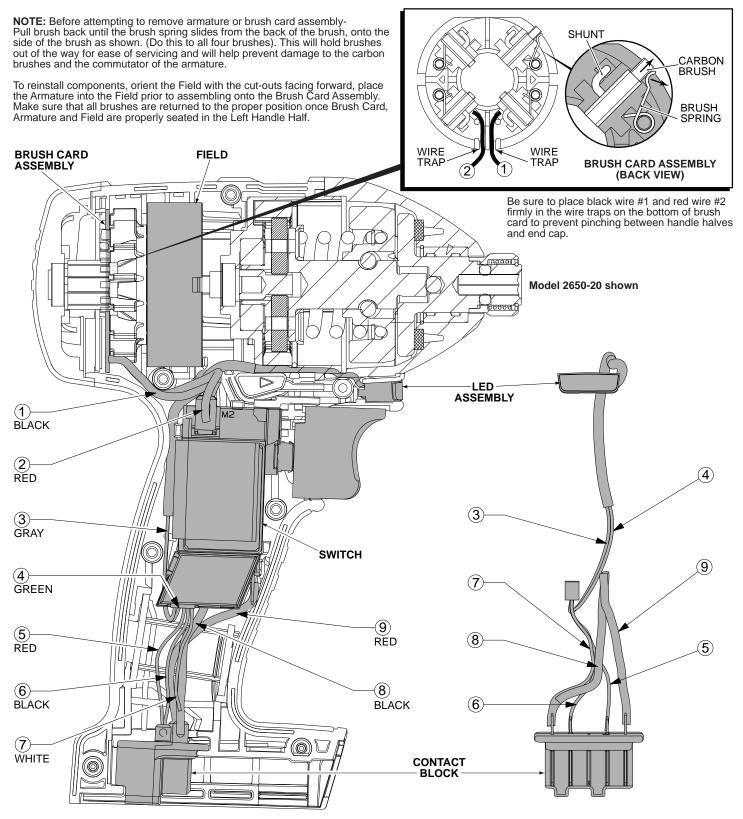

WIRING SPECIFICATIONS				
Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation
1	Black			Component of the Switch/Brush Card Assembly.
2	Red			Component of the Switch/Brush Card Assembly.
3	Gray			Component of the Switch/Brush Card Assembly.
4	Green			Component of the Switch/Brush Card Assembly.
5	Red			Component of the Switch/Brush Card Assembly.
6	Black			Component of the Switch/Brush Card Assembly.
7	White			Component of the Switch/Brush Card Assembly.
8	Black			Component of the Switch/Brush Card Assembly.
9	Red			Component of the Switch/Brush Card Assembly.

AS AN AID TO REASSEMBLY, TAKE NOTICE OF WIRE ROUTING AND POSITION IN WIRE GUIDES AND TRAPS WHILE DISMANTLING TOOL.

BE CAREFUL AND AVOID PINCHING WIRES BETWEEN HANDLE HALVES WHEN ASSEMBLING.